


**Wireless-F Infrared Flasher**

**Infrared Flashlight for the Headstages of the  
Wireless2100-System and the Wireless-System**

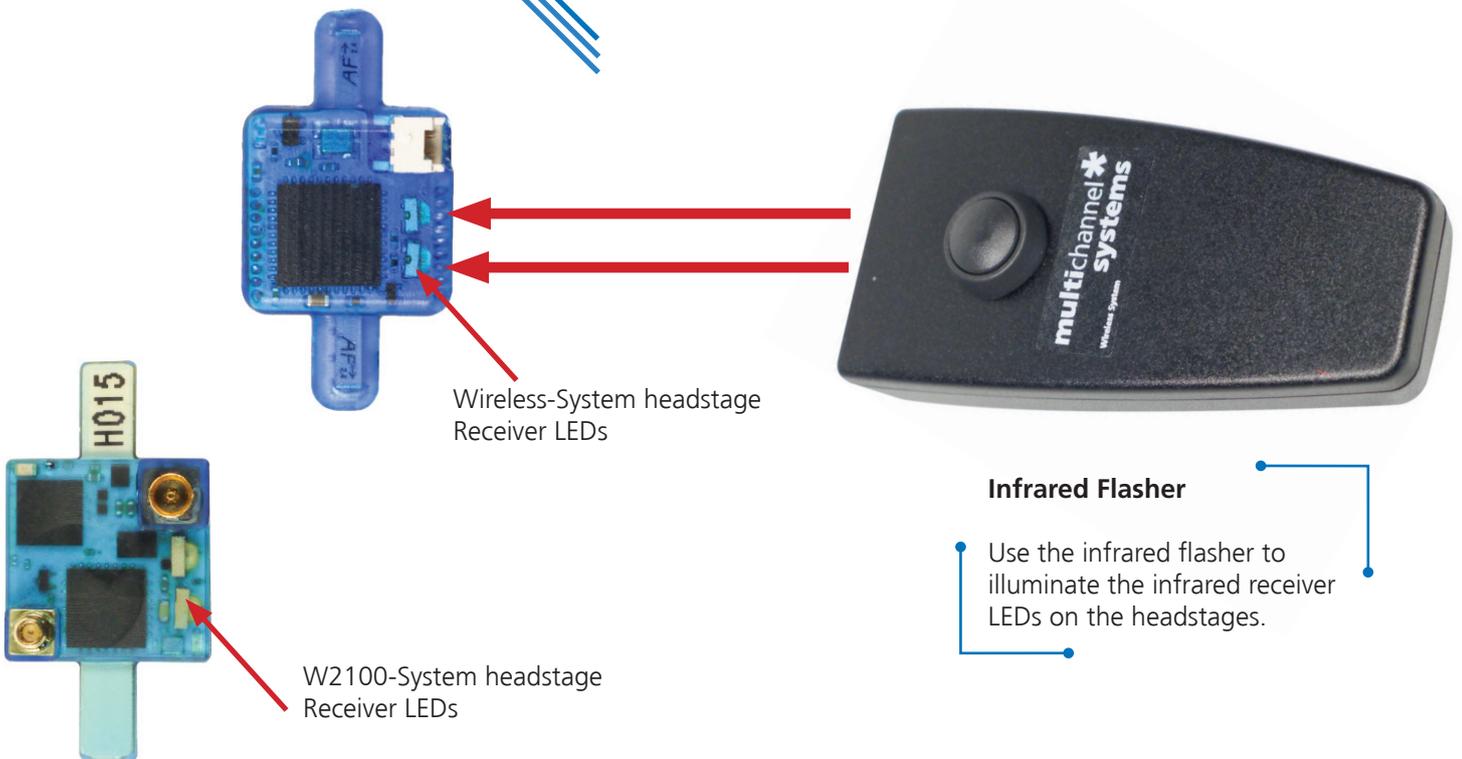

Wireless-System headstage  
Receiver LEDs

W2100-System headstage  
Receiver LEDs

**Infrared Flasher**

Use the infrared flasher to  
illuminate the infrared receiver  
LEDs on the headstages.

**Important: Please pay attention to the orientation of the flasher as the  
infrared beam has to meet the receiver LEDs on the headstage directly!**

**Infrared Flashlight**

The infrared flashlight is used for switching the wireless  
headstage „On“ when the system is in „Switched Off“  
mode. Please see the Wireless-System or W2100-System  
manuals for detailed information of the software and  
hardware control.